

---

## Troubleshooting SmartBoard

### Sound Troubleshooting (SmartBoard M600)

#### STEP 1:



Right click the **Volume Icon** located on the taskbar to the bottom right.

#### STEP 2:



Click on **Playback Devices**.

#### STEP 3:



Right click on **HDTX** and select **Set as default device**.

\* If the sound is not loud enough, remember that SmartBoards have two speakers. In order to adjust the volume, turn the volume button located on the SmartBoard pen tray.