
Troubleshooting SmartBoard

Sound Troubleshooting (SmartBoard M600)

STEP 1:



Right click the **Volume Icon** located on the taskbar to the bottom right.

STEP 2:



Click on **Playback Devices**.

STEP 3:



Right click on **HDTX** and select **Set as default device**.

* If the sound is not loud enough, remember that SmartBoards have two speakers. In order to adjust the volume, turn the volume button located on the SmartBoard pen tray.